


INSTALLATION - ENGINE

1. Install engine lift fixture Special tool # 8984 and 8984-UPD.
2. Position the engine in the engine compartment.
3. Lower engine into compartment and align engine with transmission.

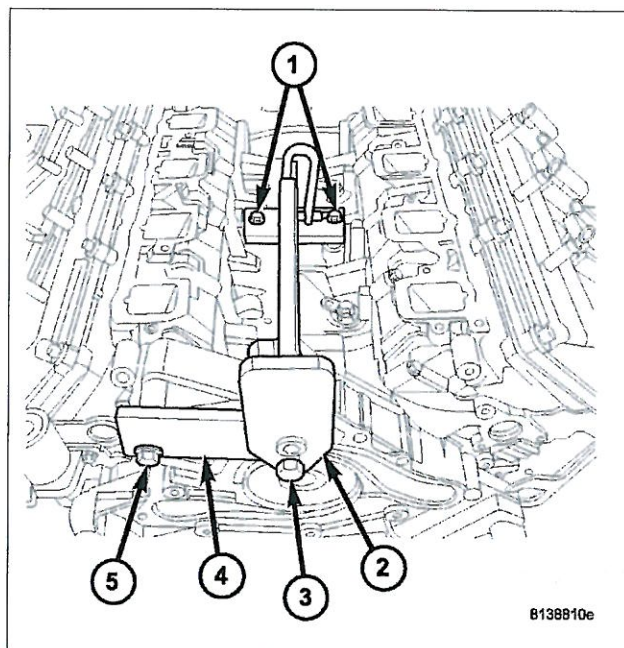

4. Mate engine and transmission and install two transmission to engine block mounting bolts finger tight.
5. Lower engine assembly until engine mount studs rest in frame perches.

