

EXTERIOR


TABLE OF CONTENTS

	page		page
BELLY PAN		CROSSMEMBER-HEADLAMP MOUNTING	
REMOVAL	76	REMOVAL	84
INSTALLATION	77	INSTALLATION	86
CLADDING-BODY SIDE		SHIELD-WHEELHOUSE - FRONT	
REMOVAL	78	REMOVAL	87
INSTALLATION	78	INSTALLATION	88
PANEL-COWL TOP		SHIELD-WHEELHOUSE - REAR	
REMOVAL	79	REMOVAL	89
INSTALLATION	80	INSTALLATION	90
GRILLE		SPOILER	
REMOVAL	81	REMOVAL	91
INSTALLATION	81	INSTALLATION	92
RACK-LUGGAGE		MIRROR-SIDE VIEW	
REMOVAL	82	REMOVAL	93
INSTALLATION	82	INSTALLATION	94
RACK-LUGGAGE - CROSSBAR		GLASS-SIDE VIEW MIRROR	
REMOVAL	83	REMOVAL	94
INSTALLATION	84	INSTALLATION	95


BELLY PAN

REMOVAL

- 1. Raise and support the vehicle.
- 2. Remove the screws (1) that secure the front belly pan (2) to the underside of the vehicle.
- 3. Remove the front belly pan from the underside of the vehicle.

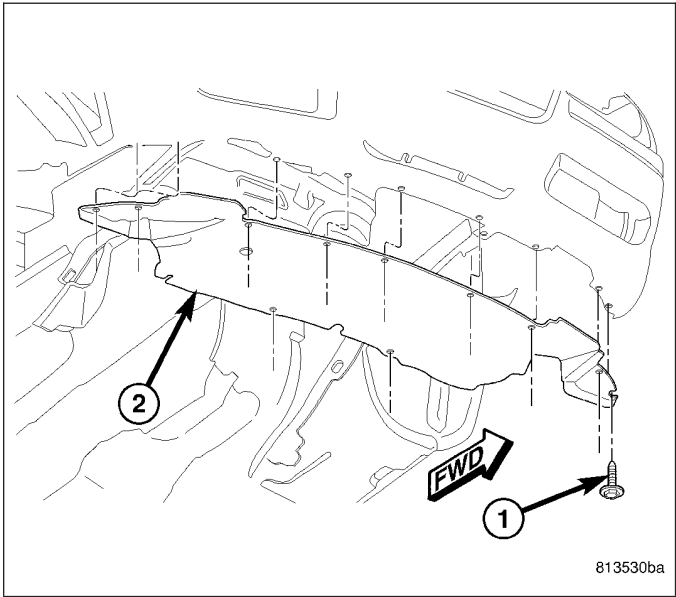


4. Remove the screws (1) that secure the rear belly pan (2) to the underside of the vehicle.
5. Remove the rear belly pan from the underside of the vehicle.

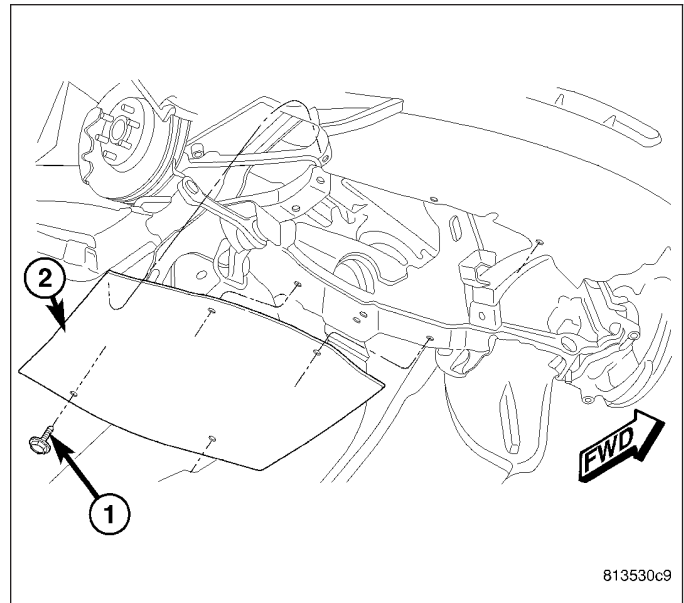

INSTALLATION

1. Position the rear belly pan (2) to the underside of the vehicle.
2. Install the screws (1) that secure the rear belly pan to the underside of the vehicle. Tighten the screws securely.

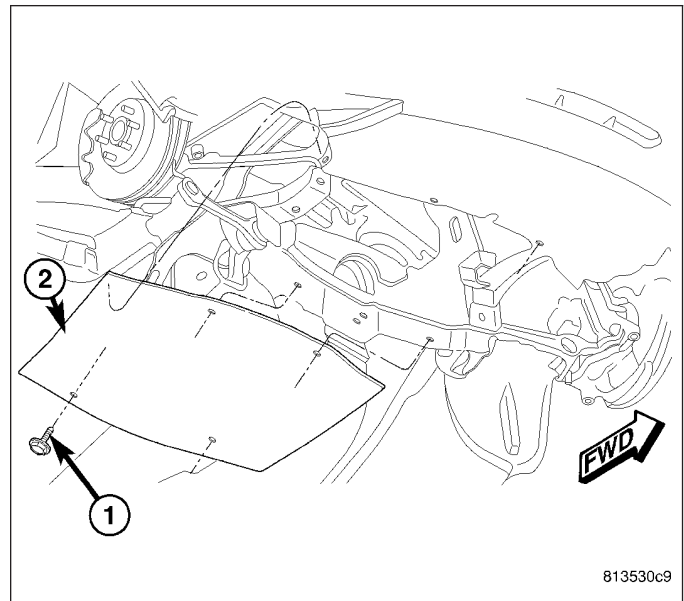

3. Position the front belly pan (2) to the underside of the vehicle.
4. Install the screws (1) that secure the front belly pan to the underside of the vehicle. Tighten the screws securely.
5. Lower the vehicle.

